

IMAGE A

1- By pressing the plastic clips to allow to rails on carrier mechanism and inside rail the upper viewer (IMAGE A).

B-1

2- Fix to down carrier mechanism front in 12 mm on center of module floor with screw (B-1).

B-2

3- Fix to inside rail the upper viewer front in 15 mm on center of module bottom with screws (B-2).

4- Set to upper viewer antatching on frame according to cabinet height (B-3). After attach to frame on mounted inside the cabinet upper viewer and bottom carrier (B-4).

B-5

5- Fix to connection part of cover on frame using U hook and with nuts (B-5).

IMAGE B

- 6- Fix to cover module on cover connection part with chip board screw (B-6)
- 7- Close the cover module. After set to square of cover on the lid cover fittings with the set screw (B-7).
- 8- Fix to baskets on hang plastic on the mechanism (IMAGE B-8).
- 9- Fit to hang plastic for to change the range of basket (IMAGE B-9).

ITEM PARTS		
NO	PART NAME	PCS.
1	BOTTOM CARRIER	1
2	UPPER VIEWER	1
3	FRAME	1
4	BASKET	4/7
5	COVER CONNECTION PART	2/3
6	U HOOK	2/3
7	HANG PLASTIC	8/14
8	SET SCREW	2
9	NUTS M6	4/6
10	CHIP BOARD SCREW	15-17

STOCK CODE: SMA1 IMAGE NO: RSM151

IMAGE A

1-Close and hanger plastic to the profile by 45° (IMAGE A).

IMAGE B

2-Adjust the plastic pins on the plastic by pulling down (IMAGE B).

IMAGE C

3- Fix the hanger plastic by pulling down (IMAGE C).

IMAGE D

4-Push tightly the basket wires and move up on the plastic channels, when you push the basket wires adjust equal distance according to the channels (IMAGE D D-1 D-2)

IMAGE D-1

IMAGE D-2

IMAGE E

5-Center the basket to the hanger seat. (IMAGE E E-1)

IMAGE E-1

IMAGE F

6- Make sure that both sides hanger plastics are sitted and pressing down gently (IMAGE F).

NOTE: Don't use any tools like screwdrivers and hammer, when you fix the baskets.